

FT-218 St. Aubin Wall Fountain

Two people are recommended for the installation of this fountain!



FOUNTAIN INFORMATION:

This fountain holds approximately 25 gallons of water.

This fountain uses a medium fountain cover.
(FTNCOV-MED)

Compatible with Refill #10 Device and LED kits
(A special stopper is required for the refill device.)

Pump Kit Parts List

 
PK300 (1)
#10 stopper (1)
Approx. 12" length of 1/2" Black non-kink tubing (1) **
2" length of 5/8" clear tubing (1) **
Hose clamps (1) *

* Hose clamps may be used as flow restrictors

** Tubing has been preassembled

TOOLS REQUIRED:

Bubble Level



PUMP INFORMATION:

OEMPF320 - 320 GPH Pump
16 FT cord length

- W I N T E R C A R E -

Fountain bowls/tops and other fountain components, which collect water, should not be left outside in the winter since any component, which fills with water and freezes may crack. Likewise, components such as pedestals, which remain in a basin, filled with water, which then freezes, may also crack or crumble. Ideally, therefore, a fountain should always be stored indoors or in a dry protected place such as a covered porch away from the elements. However, if a fountain must be left outside:

- (1) Remove pump, rubber stoppers, drainpipes, finials, and other small components for storage indoors. Note that stoppers or drainpipes are removed to allow drainage in the event water accumulates in any basin.
- (2) Raise fountain base from ground with wood strips so that base will not freeze to the ground surface.
- (3) Cover or wrap the fountain with burlap or other absorbent material (old blanket or towel) and then cover securely with plastic, making sure that water will not accumulate in the basin or other fountain component and freeze;
- (4) Check fountain periodically to ensure that plastic is secure and water is not accumulating in any fountain component.

- G E N E R A L F O U N T A I N T I P S -

Install fountains on a level surface. You will need a properly grounded 110-volt (AC only) GFCI protected receptacle near the fountain for your pump. All pumps are submersible and must be completely underwater to function properly. Test all pumps and adjust to full output prior to assembly. It is not recommended that fountains be placed directly on grass or dirt. Position the channel opening at the base of each fountain toward the electrical outlet to be used since the pump cord will be threaded through this opening.

Check out YouTube for a "How to" video.

For more Campania product information visit www.campaniainternational.com

All of our cast stone is proudly

 


Made in USA


FT-218 St. Aubin Wall Fountain

Two people are recommended for the installation of this fountain!

Assemble your fountain on a level surface capable of holding a minimum of 950 pounds with an approximate 6 square foot footprint.

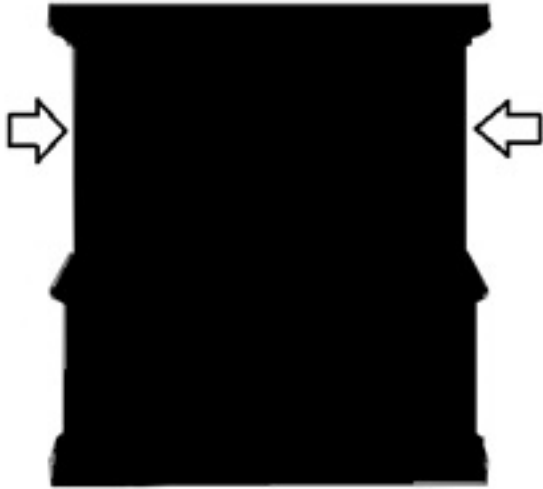

FT-218A (737 lbs)
40”L x 22”W x 41”H

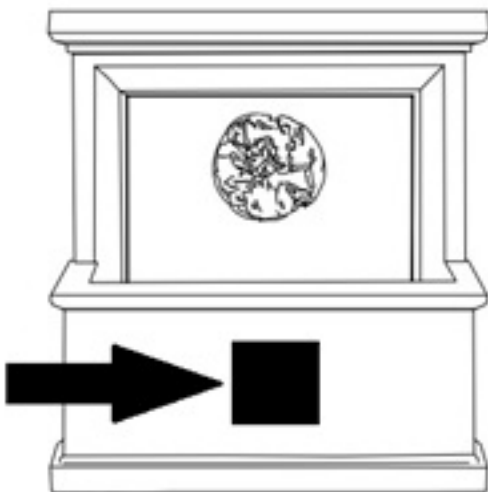 

FT-218B (29 lbs)
11”L x 8.5”W x 8”H

1. Position the basin (FT-218A) where the fountain is to be installed, ensuring that it is level.
2. Assemble the pump and tubing
 - a. Using a hose clamp, attach the non-kink tubing to the pump outlet.
 - b. **NOTE: All pumps come 2 adapters secured to the power cord.**
 - i. **This fountain uses the smallest adapter provided.**
 - c. Place the stopper around the pump cord approximately 6 inches from the pump.
3. Feed the pump cord through the hole in the basin (FT-218A).
4. **FIRMLY** press the stopper into the hole evenly.
 - a. Note: Using the handle of a screwdriver or hammer works best to press the stopper in place.
5. Attach the other 5/8” clear end of the tubing assembly over pipe protruding at the bottom of the basin (FT-218A).
6. Place the pump cover (FT-218B) over the pump.
7. Fill the fountain with water.