# FT-254 Rochefort Fountain



### FOUNTAIN INFORMATION:

This fountain holds approximately 5 gallons of water.

This fountain uses a small fountain cover. (FTNCOV-SM)

Compatible with #10 Refill Devise
(A special stopper is required to use the refill kit for this fountain.)

# **Pump Kit Parts List**

PK300 Pump (1) #10 stopper (1) 8" length of 1/2" black non-kink tubing (1) \*\* 1 1/2" length of 5/8" clear tubing (1) \*\* 1 1/2" length of 1/2" CPVC pipe (1) \*\* Hose clamps (2) \*

- \* Hose clamps may be used as flow restrictors
- \*\* Tubing has been preassembled

## **TOOLS REQUIRED:**

**Bubble Level** 



#### **PUMP INFORMATION:**

OEMPF320 - 320 GPH Pump 16 FT cord length

### -WINTER CARE-

Fountain bowls/tops and other fountain components, which collect water, should not be left outside in the winter since any component, which fills with water and freezes may crack. Likewise, components such as pedestals, which remain in a basin, filled with water, which then freezes, may also crack or crumble. Ideally, therefore, a fountain should always be stored indoors or in a dry protected place such as a covered porch away from the elements. However, if a fountain must be left outside:

- (1) Remove pump, rubber stoppers, drainpipes, finials, and other small components for storage indoors. Note that stoppers or drainpipes are removed to allow drainage in the event water accumulates in any basin.
- (2) Raise fountain base from ground with wood strips so that base will not freeze to the ground surface.
- (3) Cover or wrap the fountain with burlap or other absorbent material (old blanket or towel) and then cover securely with plastic, making sure that water will not accumulate in the basin or other fountain component and freeze;
- (4) Check fountain periodically to ensure that plastic is secure and water is not accumulating in any fountain component.

### -GENERAL FOUNTAIN TIPS-

**Install fountains on a level surface.** You will need a properly grounded 110-volt (AC only) GFCI protected receptacle near the fountain for your pump. All pumps are submersible and must be completely underwater to function properly. Test all pumps and adjust to full output prior to assembly. It is not recommended that fountains be placed directly on grass or dirt. Position the channel opening at the base of each fountain toward the electrical outlet to be used since the pump

 
cord will be threaded through this opening.

Check out YouTube for a "How to" video. For more Campania product information visit www.campaniainternational.com



# FT-254 Rochefort Fountain

Assemble your fountain on a level surface capable of holding a minimum of 270 pounds with an approximate 0.75 square foot footprint.



FT-254D (9 lbs) 8.75"W x 5.5"H

- 1. Place the base (FT-254F) into position where the fountain will be installed, ensuring that it is level.
- 2. Assemble the pump kit.
  - a. NOTE: All pumps come with 1 adapter already inserted into the pump and 2 adapters secured to the power cord.
    - i. This fountain uses the smaller adapter not already in the pump.
  - b. Using a hose clamp, attach the 1/2" non-kink tubing to the pump outlet.
  - c. Place the stopper around the pump cord approximately 6 inches from the pump.
- 3. Feed the pump cord through the hole and channel in the basin (FT-254F).
- 4. **FIRMLY** press the stopper into the hole evenly.
- 5. Place the pump house (FT-254D) over the pump and in the center of the basin (FT-254F).
- 6. Insert the CPVC end of the preassembled tubing to the CPVC coupling protruding from the bottom of the water feature (FT-254C).
- 7. Center the water feature (FT-254C) over the pump house (FT-254D).



8. Place the water control cap (FT-254B) into the water feature (FT-254C).



9. Place the fountain cap (FT-254A) on top of the water feature (FT-254C).



4.5"L x 1.25"W x 3.5"H

- 10. Fit the pump house door (FT-254E) into the pump house (FT-254C).
- 11. Fill the fountain with water.