
# FT-302 Echo Park Fountain

### Two people are recommended for the installation of this fountain!

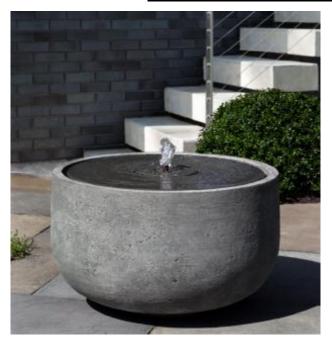

#### FOUNTAIN INFORMATION:

This fountain holds approximately 8 gallons of water.

This fountain uses a small fountain cover. (FTNCOV-SM)

Compatible with Refill #10 Device (A different style stopper may be requested for this part.)

# **Pump Kit Parts List**

PK300 pump (1) #10 stopper (1) Approx. 20" length of 1/2" Black Non-Kink tubing (1) \*\* 2" length of 5/8" clear vinyl tubing (1) \*\* 2" length of 1/2" PVC pipe (1) \*\* Wedges (2) Hose clamps (3)\*

\*Hose clamps can be used as flow restrictors.

## **TOOLS REQUIRED:**

**Bubble Level** 



#### **PUMP INFORMATION:**

**OEMPH325 - 325 GPH Pump** 16 FT cord length

#### -WINTER CARE-

Fountain bowls/tops and other fountain components, which collect water, should not be left outside in the winter since any component, which fills with water and freezes may crack. Likewise, components such as pedestals, which remain in a basin, filled with water, which then freezes, may also crack or crumble. Ideally, therefore, a fountain should always be stored indoors or in a dry protected place such as a covered porch away from the elements. However, if a fountain must be left outside:

- (1) Remove pump, rubber stoppers, drainpipes, finials, and other small components for storage indoors. Note that stoppers or drainpipes are removed to allow drainage in the event water accumulates in any basin.
- (2) Raise fountain base from ground with wood strips so that base will not freeze to the ground surface.
- (3) Cover or wrap the fountain with burlap or other absorbent material (old blanket or towel) and then cover securely with plastic, making sure that water will not accumulate in the basin or other fountain component and freeze;
- (4) Check fountain periodically to ensure that plastic is secure and water is not accumulating in any fountain component.

#### -GENERAL FOUNTAIN TIPS-

Install fountains on a level surface. You will need a properly grounded 110-volt (AC only) GFCI protected receptacle near the fountain for your pump. All pumps are submersible and must be completely underwater to function properly. Test all pumps and adjust to full output prior to assembly. It is not recommended that fountains be placed directly on grass or dirt. Position the channel opening at the base of each fountain toward the electrical outlet to be used since the pump

cord will be threaded through this opening.


All of our cast stone is proudly Made in USA

Check out YouTube for a "How to" video. For more Campania product information visit www.campaniainternational.com

<sup>\*\*</sup>Black non-kink tubing and clear vinyl tubing have been preassembled


# FT-302 Echo Park Fountain Two people are recommended for the installation of this fountain!

Assemble your fountain on a level surface capable of holding a minimum of 383 pounds with an approximate 1 square foot footprint.

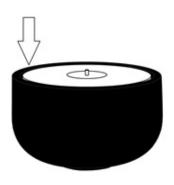


FT-302C (269 lbs) 28"W x 17.5"H

- 1. Position the basin (FT-302C) where the fountain is to be installed, ensuring that it is level.
- 2. Assemble the pump kit
  - a. Connect the tubing to the pump outlet.
  - b. Place the stopper around the pump cord approximately 6" from the pump.
- 3. Feed the pump cord through the hole and channel in the basin (FT-302C).
- 4. FIRMLY press the stopper into the hole evenly.
  - a. Note: Using the handle of a screwdriver or hammer works best to press the stopper in place.

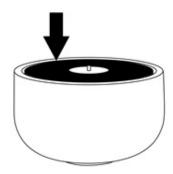

FT-302B (43 lbs) 24.25"W x 1.25"H

5. Center the large disc (FT-302B) inside the basin, ensuring that it is centered and level.

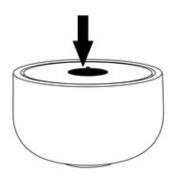

FT-302A (4 lbs) 7.5"W x 3"H

- 6. Holding the water feature disc (FT-302A) over the large disc (FT-302B), insert the PVC connected to the non-kink tubing into the PVC coupling protruding from the bottom.
- 7. Carefully place water feature disc (FT-302A) into the large disc (FT-302B) ensuring that it is centered.
- 8. Fill the fountain with water.