

FT-339 MC-4 Fountain



FOUNTAIN INFORMATION:

This fountain holds approximately 5-10 gallons of water.

This fountain uses a small fountain cover.
(FTNCOV-SM)

Compatible with Refill #10 Device and LED Kits
(A different style stopper may be requested for this part.)

Pump Kit Parts List

PK300 pump (1)
#10 stopper (1)
#7 Drain stopper (1)
Approx. 8" length of 1/2" black non-kink tubing (1) **
2" length of 5/8" clear vinyl tubing (1) **
Hose clamps (1) *

* Hose clamps may be used as flow restrictors

**Black non-kink tubing and clear vinyl tubing have been preassembled

TOOLS REQUIRED:

Bubble Level



PUMP INFORMATION:

OEMPF320 - 320 GPH Pump
16 FT cord length

- W I N T E R C A R E -

Fountain bowls/tops and other fountain components, which collect water, should not be left outside in the winter since any component, which fills with water and freezes may crack. Likewise, components such as pedestals, which remain in a basin, filled with water, which then freezes, may also crack or crumble. Ideally, therefore, a fountain should always be stored indoors or in a dry protected place such as a covered porch away from the elements. However, if a fountain must be left outside:

- (1) Remove pump, rubber stoppers, drainpipes, finials, and other small components for storage indoors. Note that stoppers or drainpipes are removed to allow drainage in the event water accumulates in any basin.
- (2) Raise fountain base from ground with wood strips so that base will not freeze to the ground surface.
- (3) Cover or wrap the fountain with burlap or other absorbent material (old blanket or towel) and then cover securely with plastic, making sure that water will not accumulate in the basin or other fountain component and freeze;
- (4) Check fountain periodically to ensure that plastic is secure, and water is not accumulating in any fountain component.

- G E N E R A L F O U N T A I N T I P S -

Install fountains on a level surface. You will need a properly grounded 110-volt (AC only) GFCI protected receptacle near the fountain for your pump. All pumps are submersible and must be completely underwater to function properly. Test all pumps and adjust to full output prior to assembly. It is not recommended that fountains be placed directly on grass or dirt. Position the channel opening at the base of each fountain toward the electrical outlet to be used since the pump cord will be threaded through this opening.

Check out YouTube for a "How to" video.

For more Campania product information visit www.campaniainternational.com


All of our cast stone is proudly




Made in USA

FT-339 MC-4 Fountain


Assemble your fountain on a level surface capable of holding a minimum of 200 pounds with an approximate 1.5 square foot footprint.

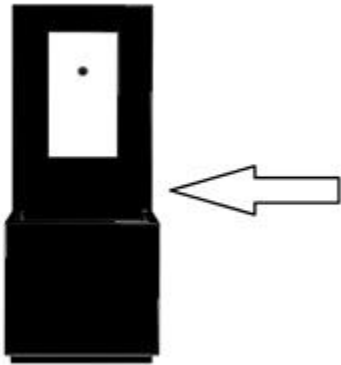

FT-339A (167 lbs)
15"L x 15"W x 34"H

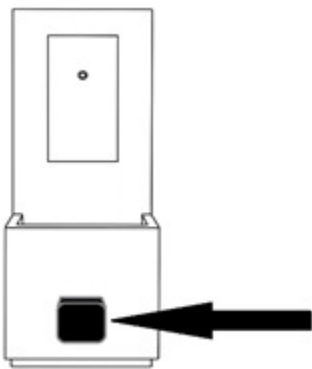

FT-331B (15 lbs)
8.5"L x 6"W x 6"H

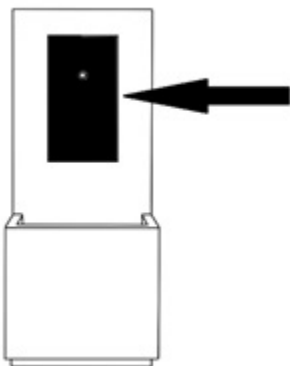

FT-339CPP Copper Plate
(for FT-339/CP)
FT-339CSP Corten Steel Plate
(for FT-339/CS)

1. Position the basin (FT-339A) where the fountain is to be installed, ensuring that it is level.
2. Assemble the pump and tubing
 - a. **NOTE: Be sure to use the appropriate size adapter provided with the pump**
 - b. Using a hose clamp, attach the 1/2" non-kink tubing to the pump outlet.
 - c. Place the stopper around the pump cord approximately 6 inches from the pump.
3. Feed the pump cord through the larger hole in the back of the basin (FT-339A).
4. **FIRMLY** press the stopper into the hole evenly.
 - a. Note: Using the handle of a screwdriver or hammer works best to press the stopper in place.
5. Fit the clear end of the tubing assembly over the CPVC pipe protruding at the bottom of the basin.
6. Place the pump cover (FT-331B) over the pump.
7. Fill the fountain with water.
8. The copper or steel face plates will be installed and sealed in place before shipping.