

FT-30 Palazzo Urn Fountain

Three people are recommended for the installation of this fountain!



FOUNTAIN INFORMATION:

This fountain holds approximately 30 gallon of water.

**This fountain uses a medium fountain cover.
(FTNCOV-MED)**

**Compatible with #7 Refill Device and LED Kits
(A special stopper is required to use the refill kit for
this fountain.)**

Pump Kit Parts List

PK500 Pump (1)
#10 stopper (1)
1/2"x1/2"x1/2" T connector (1) **
Approx. 12" length of 1/2" non-kink tubing (1) **
Approx. 6" length of 1/2" non-kink tubing (2) **
Approx. 30" length of 1/2" black non-kink tubing (1)
8" length of 3/8" i.d. copper pipe (1)
6 1/2" length of 3/8" i.d. copper pipe (1)
3/8" i.d 1/2" o.d copper sleeves (3)
Plastic spray head (1)
Hose clamps (5) *
Wedges (4)

* Hose clamps may be used as flow restrictors
**The internal tubing has been preassembled

TOOLS REQUIRED:

Bubble Level



PUMP INFORMATION:

**OEMPF525 - 525 GPH Pump
16 FT cord length**

- W I N T E R C A R E -

Fountain bowls/tops and other fountain components, which collect water, should not be left outside in the winter since any component, which fills with water and freezes may crack. Likewise, components such as pedestals, which remain in a basin, filled with water, which then freezes, may also crack or crumble. Ideally, therefore, a fountain should always be stored indoors or in a dry protected place such as a covered porch away from the elements. However, if a fountain must be left outside:

- (1) Remove pump, rubber stoppers, drainpipes, finials, and other small components for storage indoors. Note that stoppers or drainpipes are removed to allow drainage in the event water accumulates in any basin.
- (2) Raise fountain base from ground with wood strips so that base will not freeze to the ground surface.
- (3) Cover or wrap the fountain with burlap or other absorbent material (old blanket or towel) and then cover securely with plastic, making sure that water will not accumulate in the basin or other fountain component and freeze;
- (4) Check fountain periodically to ensure that plastic is secure and water is not accumulating in any fountain component.

- G E N E R A L F O U N T A I N T I P S -

Install fountains on a level surface. You will need a properly grounded 110-volt (AC only) GFCI protected receptacle near the fountain for your pump. All pumps are submersible and must be completely underwater to function properly. Test all pumps and adjust to full output prior to assembly. It is not recommended that fountains be placed directly on grass or dirt. Position the channel opening at the base of each fountain toward the electrical outlet to be used since the pump cord will be threaded through this opening.

All of our cast stone is proudly



Made in USA

Check out YouTube for a "How to" video.
For more Campania product information visit www.campaniainternational.com

FT-30 Palazzo Urn Fountain

Three people are recommended for the installation of this fountain!


Assemble your fountain on a level surface capable of holding a minimum of 1135 pounds with an approximate 14 square foot footprint.



FT-29C/30D (579 lbs)
45"L x 45"W x 11"H



FT-29B/30C (52 lbs)
12"L x 12"W x 8"H

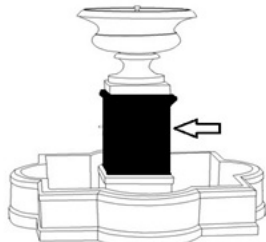

FT-30B (115 lbs)
12"L x 12"W x 16.5"H




FT-30A (134 lbs)
18"L x 18"W x 21"H



FT-29BB/30CC (4 lbs)
5"L x 1"W x 5"H

1. Place the basin (FT-29C/30D) into position where the fountain will be installed, ensuring that it is level.
2. Assemble the pump kit
 - a. Connect the preassembled tubing (diagram right) to the pump by sliding the 12" length of non-kink tubing over the pump outlet.
 - b. Place hose clamps on each of the ends of the 6" non-kink tubing.
 - c. Place the stopper around the pump cord approximately 8 inches from the pump.
3. Feed the pump cord through the hole in the basin (FT-29C/30D) and the channel.
4. **FIRMLY** press the stopper into the hole evenly.
 - a. Note: Using the handle of a screwdriver or hammer works best to press the stopper in place.
5. Place the pump cover (FT-29B/30C) over the pump. Ensure it is placed properly and leveled.

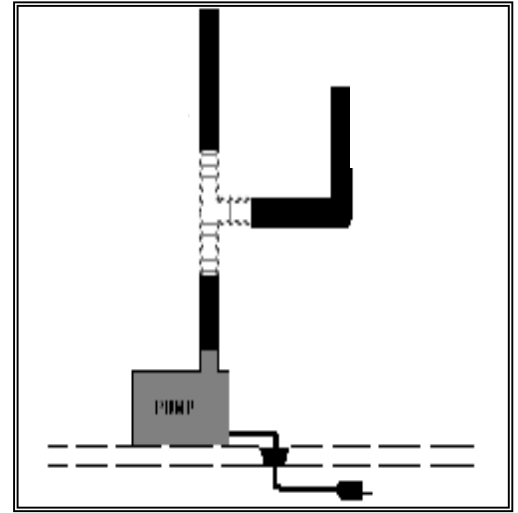

BOTTOM OF COLUMN (FT-30B)

6. Secure the 2 open ended 6" pieces of non-kink tubing to the 2 pipes protruding from the bottom of the column (FT-30B).
7. Center the column (FT-30B) on top of the pump cover (FT-29B/30C).

INSIDE OF COLUMN (FT-30B)

8. Use a hose clamp to attach the 30" length of non-kink tubing to one of the two pipes protruding on the inside of the column (FT-30B).

BOTTOM OF URN (FT-30A)

9. Use another hose clamp to secure the other end of the 30" non-kink tubing to the pipe protruding from the **CENTER** of the urn (FT-30A).
10. Center the urn (FT-30A) over the column (FT-30B).

INSIDE OF URN (FT-30A)

11. Place a copper sleeve over each of the copper pipes inside the urn (FT-30A).
12. Place the 8" copper pipe over the pipe protruding up from the **CENTER** of the urn (FT-30A).
 - a. If a spray head is desired, place the third copper sleeve over the 8" copper pipe that is centered inside the urn and place the spray head onto the copper sleeve.
13. Place the 6 1/2" copper pipe over the remaining pipe protruding off-center inside the urn.
14. Place the pump cover door (FT-29BB/30CC) in the pump access opening of the pump cover (FT-29D/30C).
15. Fill the basin with water.