

FT-312 Vence Wall Fountain

Three people are recommended for the installation of this fountain!



FOUNTAIN INFORMATION:

This fountain holds approximately 20 gallons of water.

**This fountain uses a large fountain cover.
(FTNCOV-LG)**

**Compatible with Refill #10 Device and LED Kits
(A different style stopper may be requested for the refill kit.)**

Pump Kit Parts List

PK500 pump (1)
#7 wing nut drain stopper (1)
20" length of 1/2" Black non-kink tubing (1) **
2" length of 5/8" clear vinyl tubing (1) **
2" length of 1/2" CPVC pipe (1) **
Approx. 53" length of 3/8" rebar (2)
Spiller Spout (1)
2.8 oz tube of silicone (1)
Hose clamps (1) *
Wedges (4)

* Hose clamps may be used as flow restrictors
** The internal tubing has been preassembled

TOOLS REQUIRED:

Bubble Level



PUMP INFORMATION:

**OEMPF525 - 525 GPH Pump
16 FT cord length**

- W I N T E R C A R E -

Fountain bowls/tops and other fountain components, which collect water, should not be left outside in the winter since any component, which fills with water and freezes may crack. Likewise, components such as pedestals, which remain in a basin, filled with water, which then freezes, may also crack or crumble. Ideally, therefore, a fountain should always be stored indoors or in a dry protected place such as a covered porch away from the elements. However, if a fountain must be left outside:

- (1) Remove pump, rubber stoppers, drainpipes, finials, and other small components for storage indoors. Note that stoppers or drainpipes are removed to allow drainage in the event water accumulates in any basin.
- (2) Raise fountain base from ground with wood strips so that base will not freeze to the ground surface.
- (3) Cover or wrap the fountain with burlap or other absorbent material (old blanket or towel) and then cover securely with plastic, making sure that water will not accumulate in the basin or other fountain component and freeze;
- (4) Check fountain periodically to ensure that plastic is secure and water is not accumulating in any fountain component.

- G E N E R A L F O U N T A I N T I P S -

Install fountains on a level surface. You will need a properly grounded 110-volt (AC only) GFCI protected receptacle near the fountain for your pump. All pumps are submersible and must be completely underwater to function properly. Test all pumps and adjust to full output prior to assembly. It is not recommended that fountains be placed directly on grass or dirt. Position the channel opening at the base of each fountain toward the electrical outlet to be used since the pump cord will be threaded through this opening.

Check out YouTube for a "How to" video.

For more Campania product information visit www.campaniainternational.com

All of our cast stone is proudly




Made in USA


FT-312 Vence Wall Fountain

Three people are recommended for the installation of this fountain!


Assemble your fountain on a level surface capable of holding a minimum of 1200 pounds with an approximate 4 square foot footprint.

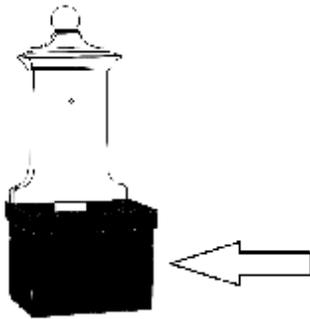


FT-312H (614 lbs)
30"L x 23"W x 23"H

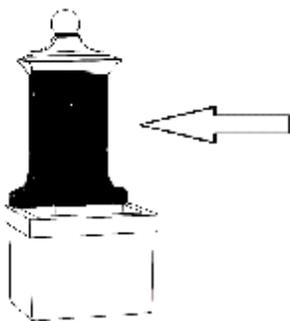

FT-312G (246 lbs)
28"L x 5"W x 31.5"H

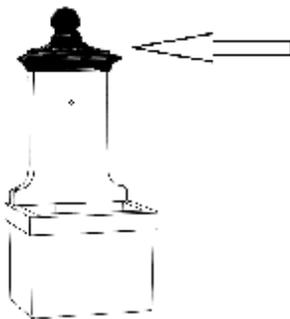

FT-312E (72 lbs)
28"L x 7.25"W x 16"H

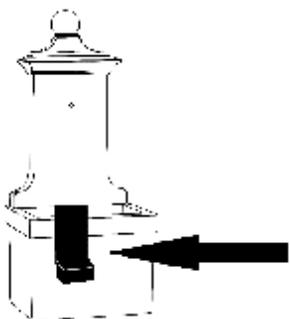

FT-312F (28 lbs)
9"L x 5"W x 20.75"H

1. Position the basin (FT-312H) where the fountain is to be installed, ensuring that it is level.
2. Assemble the pump kit
 - a. **NOTE: All pumps come with multiple adapters**
 - i. **This fountain uses the smallest adapter provided.**
 - b. Connect the non-kink tubing end of the tubing assembly to the pump outlet with a hose clamp.
3. Lay the pump cord over the notch at the back-center of the basin (FT-312H).
4. Carefully lower the water feature (FT-312G) onto the basin (FT-312H).
5. Insert both pieces of rebar into the PVC standpipes at the top of the water feature (FT-312G).
6. Fit the fountain cap (FT-312E) onto the water feature (FT-312G).
7. Insert the CPVC end of tubing assembly into the coupling on the bottom of the water feature (FT-312G).
8. Using a small amount of silicone, slowly twist the spiller spout into the water feature (FT-312G).
9. Place the pump cover (FT-312F) over the pump and tubing.
10. Let the fountain sit 24 hours before filling with water.