

# FT-199 Lucas Fountain



## FOUNTAIN INFORMATION:

**This fountain holds approximately 2.5 gallons of water.**

**This fountain uses a medium fountain cover.  
(FTNCOV-MED)**

**No refill device or submersible lights are suggested for  
this fountain**

## Pump Kit Parts List

PK140 Pump (1)  
#7 stopper (1)  
Copper "T" Connector (1)  
Approx. 8" length of 1/2" Black Non-Kink tubing (1)  
Approx. 6" length of 1/2" Black Non-Kink tubing (1)  
9" lengths of 3/8" rebar (2)  
Copper Spiller (1)  
2.8oz tube of silicone (1)  
Hose clamps (5) \*

\* Hose clamps may be used as flow restrictors

## TOOLS REQUIRED:

Bubble Level



## PUMP INFORMATION:

**PF140 - 140 GPH Pump  
6 FT cord length**

## - W I N T E R   C A R E -

Fountain bowls/tops and other fountain components, which collect water, should not be left outside in the winter since any component, which fills with water and freezes may crack. Likewise, components such as pedestals, which remain in a basin, filled with water, which then freezes, may also crack or crumble. Ideally, therefore, a fountain should always be stored indoors or in a dry protected place such as a covered porch away from the elements. However, if a fountain must be left outside:

- (1) Remove pump, rubber stoppers, drainpipes, finials, and other small components for storage indoors. Note that stoppers or drainpipes are removed to allow drainage in the event water accumulates in any basin.
- (2) Raise fountain base from ground with wood strips so that base will not freeze to the ground surface.
- (3) Cover or wrap the fountain with burlap or other absorbent material (old blanket or towel) and then cover securely with plastic, making sure that water will not accumulate in the basin or other fountain component and freeze;
- (4) Check fountain periodically to ensure that plastic is secure and water is not accumulating in any fountain component.

## - G E N E R A L   F O U N T A I N   T I P S -

**Install fountains on a level surface.** You will need a properly grounded 110-volt (AC only) GFCI protected receptacle near the fountain for your pump. All pumps are submersible and must be completely underwater to function properly. Test all pumps and adjust to full output prior to assembly. It is not recommended that fountains be placed directly on grass or dirt. Position the channel opening at the base of each fountain toward the electrical outlet to be used since the pump cord will be threaded through this opening.

All of our cast stone is proudly




**Made in USA**

Check out YouTube for a "How to" video.


For more Campania product information visit [www.campaniainternational.com](http://www.campaniainternational.com)

# FT-199 Lucas Fountain


Assemble your fountain on a level surface capable of holding a minimum of 282 pounds with an approximate 1.5 square foot footprint.

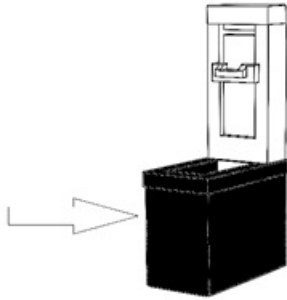


FT-199C (171 lbs)  
20.5"L x 10.75"W x 16"H

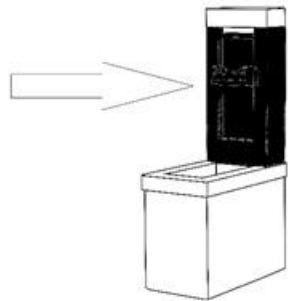


FT-199B (72 lbs)  
10"L x 5"W x 20"H

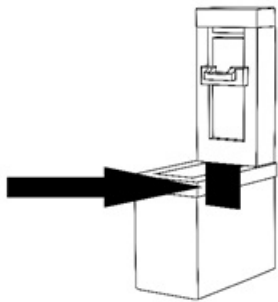

FT-199E (2 lbs)  
6.25"L x 1"W x 3"H

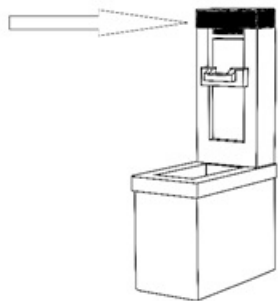

FT-199A (11 lbs)  
10"L x 5"W x 3.5"H

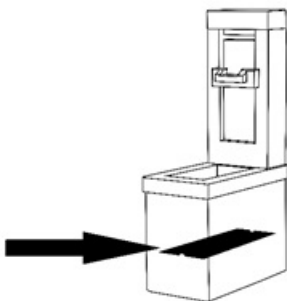

FT-199D (7 lbs)  
6"L x 12.5"W x 1"H

1. Place the basin (FT-199C) into position where the fountain will be installed, ensuring that it is level.
2. Assemble the pump kit
  - a. Place hose clamps on both ends of both pieces of 1/2" non-kink tubing.
  - b. Secure the 8" length to the pump water outlet.
  - c. Place the stopper around the pump cord approximately 6 inches from the pump.
3. Feed the pump cord through the hole in the basin (FT-199C) and the channel.
4. **FIRMLY** press the stopper into the hole evenly.
  - a. Note: Using the handle of a screwdriver or hammer works best to press the stopper in place.
5. Secure the loose end of the 8" length of non-kink tubing to the bottom most copper pipe protruding inside the basin (FT-199C).
6. Secure the 6" length of non-kink tubing to the upper copper pipe protruding inside the basin (FT-199C).
7. Place the 2 pieces of rebar into the PVC pipes at the back corners of the basin (FT-199C).
8. Connect the other end of the 6" length of non-kink tubing to the copper pipe protruding from the bottom of the water feature (FT-199B).
9. Lower the water feature (FT-199B) over the rebar supports and onto the basin (FT-199C).
10. Spread a small amount of silicone onto the bottom of the copper spiller and place it on the spout in the water feature (FT-199B).
  - a. Clean away any excess silicone.
11. Fit the plumbing cover (FT-199E) into the space in front of the 6" length of non-kink tubing.
12. Insert the copper "T" into the pipe protruding at the top of the water feature (FT-199B).
  - a. This is meant to control water flow.
13. Spread a thin bead of silicone at the top of the water feature (FT-199B) and lower the spiller stop (FT-199A) into place.
  - a. Clean away any excess silicone.
14. Place the pump cover plate (FT-199D) over the pump inside the basin (FT-199C).
15. Let the fountain sit 24 hours before filling with water.