

FT-206 Austin Fountain

Two people are recommended for the installation of this fountain!



Pump Kit Parts List

PK500 Pump (1)
#10 stopper (1)
#7 Drain Stopper w/ wing nut
Approx. 30" of 1/2" Non-Kink Black Tubing (1) **
Approx. 2" of 5/8" Clear Vinyl Tubing (1) **
Approx. 2" of 1/2" CPVC Pipe (1) **
5 1/2" length of 1/2" i.d. 5/8" o.d. Copper Pipe (1)
FT-206SPL Copper Spillers (2)
1 oz tube of silicone (1)
Wedges (3)
Hose clamps (2) *

* Hose clamps may be used as flow restrictors

**Tubing has been preassembled

FOUNTAIN INFORMATION:

This fountain holds approximately 17 gallons of water.

This fountain uses a medium fountain cover.
(FTNCOV-MED)

Compatible with #10 Refill Device and LED kits
(A special stopper is required to use the refill kit for this fountain.)

TOOLS REQUIRED:

Bubble Level



PUMP INFORMATION:

PF525 - 525 GPH Pump
16 FT cord length

- W I N T E R C A R E -

Fountain bowls/tops and other fountain components, which collect water, should not be left outside in the winter since any component, which fills with water and freezes may crack. Likewise, components such as pedestals, which remain in a basin, filled with water, which then freezes, may also crack or crumble. Ideally, therefore, a fountain should always be stored indoors or in a dry protected place such as a covered porch away from the elements. However, if a fountain must be left outside:

- (1) Remove pump, rubber stoppers, drainpipes, finials, and other small components for storage indoors. Note that stoppers or drainpipes are removed to allow drainage in the event water accumulates in any basin.
- (2) Raise fountain base from ground with wood strips so that base will not freeze to the ground surface.
- (3) Cover or wrap the fountain with burlap or other absorbent material (old blanket or towel) and then cover securely with plastic, making sure that water will not accumulate in the basin or other fountain component and freeze;
- (4) Check fountain periodically to ensure that plastic is secure and water is not accumulating in any fountain component.

- G E N E R A L F O U N T A I N T I P S -

Install fountains on a level surface. You will need a properly grounded 110-volt (AC only) GFCI protected receptacle near the fountain for your pump. All pumps are submersible and must be completely underwater to function properly. Test all pumps and adjust to full output prior to assembly. It is not recommended that fountains be placed directly on grass or dirt. Position the channel opening at the base of each fountain toward the electrical outlet to be used since the pump cord will be threaded through this opening.

Check out YouTube for a "How to" video.

For more Campania product information visit www.campaniainternational.com

All of our cast stone is proudly




Made in USA


FT-206 Austin Fountain

Two people are recommended for the installation of this fountain!


Assemble your fountain on a level surface capable of holding a minimum of 631 pounds with an approximate 7.25 square foot footprint.

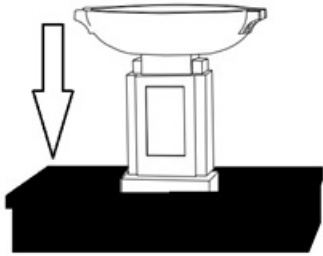


FT-206E (239 lbs)
47.5"L x 23.5"W x 9"H

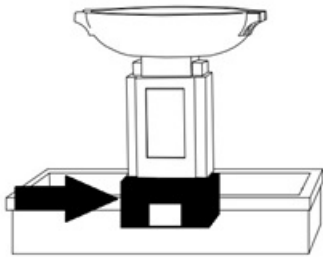


FT-206C (41 lbs)
14"L x 10"W x 8"H

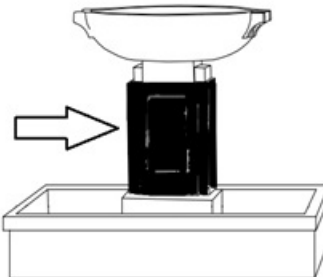

FT-206B (105 lbs)
12.75"L x 8.5"W x 16"H

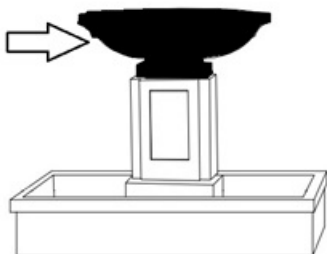

FT-206A (97 lbs)
29.5"L x 18.5"W x 10.25"H

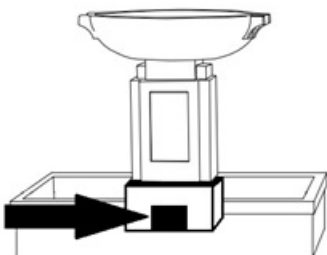

FT-206D (4 lbs)
5.75"L x 1.75"W x 4.75"H

1. Place the basin (FT-206E) into position where the fountain will be installed, ensuring that it is level.
2. Assemble the pump Kit
 - a. **NOTE: All pumps come with 1 adapter already inserted into the pump and 2 adapters secured to the power cord.**
 - i. **This fountain uses the medium adapter provided.**
 - b. Place the stopper around the pump cord approximately 8 inches from the pump.
3. Feed the pump cord through the hole in the basin (FT-206E) and the channel.
4. **FIRMLY** press the stopper into the hole evenly.
 - a. Note: Using the handle of a screwdriver or hammer works best to press the stopper in place.
5. Place the pump house (FT-206C) over the pump in the center of the basin (FT-206E).
6. Center and level the large pedestal (FT-206B) on top of the pump house (FT-206C).

UNDER THE BOWL (FT-206A)

7. Position the bowl (FT-206A) over the large pedestal (FT-206B).
8. Insert the CPVC end of the tubing assembly into the pipe protruding from the bottom of the bowl (FT-206A).
9. Feed the remaining tubing through the hole in the pedestal (FT-206B).
10. Pull the tubing and pump out of the pump house (FT-206C).
11. Connect the non-kink tubing to the pump water outlet with a hose clamp.
12. Push the pump and tubing back into the pump house (FT-206C).

INSIDE THE BOWL (FT-206A)

13. Fit the 5 1/2" copper pipe into the CPVC coupling protruding from the bottom of the bowl.
14. Use the silicone provided to attach the copper spillers.
 - a. Clean away any excess silicone.

15. Fit the pump house door (FT-206D) into the pump house (FT-206C).

16. Let the fountain sit 24 hours before filling with water.