

FT-269 Monteros Fountain

Professional installation is recommended for this fountain!



FOUNTAIN INFORMATION:

This fountain holds approximately 25 gallons of water.

**This fountain uses a medium fountain cover.
(FTNCOV-MED)**

**Compatible with Refill #10 Device and LED kit
(A different style stopper may be requested for the refill kit.)**

Pump Kit Parts List

PK800 pump (1)
#10 stopper (1)
#7 Drain stopper with wing nut (2)
Approx. 24" length of 1/2" black non-kink tubing (1) **
Approx. 2" length of 3/4" clear vinyl tubing (1) **
Approx. 2" length of 5/8" clear vinyl tubing (1) **
Approx. 18" length of 1/2" black non-kink tubing (1)
Wedges (6)
Hose clamps (4) *

* Hose clamps may be used as flow restrictors

**Tubing is preassembled

TOOLS REQUIRED:

Bubble Level 

PUMP INFORMATION:

**PP800 - 800 GPH Pump
16 FT cord length**

- W I N T E R C A R E -

Fountain bowls/tops and other fountain components, which collect water, should not be left outside in the winter since any component, which fills with water and freezes may crack. Likewise, components such as pedestals, which remain in a basin, filled with water, which then freezes, may also crack or crumble. Ideally, therefore, a fountain should always be stored indoors or in a dry protected place such as a covered porch away from the elements. However, if a fountain must be left outside:

- (1) Remove pump, rubber stoppers, drainpipes, finials, and other small components for storage indoors. Note that stoppers or drainpipes are removed to allow drainage in the event water accumulates in any basin.
- (2) Raise fountain base from ground with wood strips so that base will not freeze to the ground surface.
- (3) Cover or wrap the fountain with burlap or other absorbent material (old blanket or towel) and then cover securely with plastic, making sure that water will not accumulate in the basin or other fountain component and freeze;
- (4) Check fountain periodically to ensure that plastic is secure and water is not accumulating in any fountain component.

- G E N E R A L F O U N T A I N T I P S -

Install fountains on a level surface. You will need a properly grounded 110-volt (AC only) GFCI protected receptacle near the fountain for your pump. All pumps are submersible and must be completely underwater to function properly. Test all pumps and adjust to full output prior to assembly. It is not recommended that fountains be placed directly on grass or dirt. Position the channel opening at the base of each fountain toward the electrical outlet to be used since the pump cord will be threaded through this opening.

Check out YouTube for a "How to" video.
For more Campania product information visit www.campaniainternational.com


All of our cast stone is proudly




Made in USA

FT-269 Monteros Fountain

Professional installation is recommended for this fountain! Assemble your fountain on a level surface using crushed stone, gravel, or cement pad as the base.

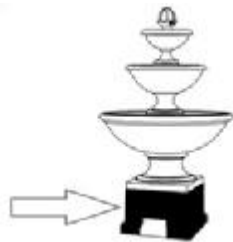

FT-269H (392 lbs)
24"L x 24"W x 15"H

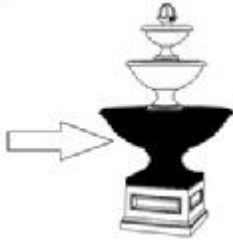

P-711 (535 lbs)
47"W x 26"H



FT-269F (103 lbs)
13.5"W x 18"H



FT-269E (94 lbs)
29"W x 9.5"H



FT-269C (35 lbs)
9.25"W x 14"H

1. Place the base (FT-269H) on a level surface capable of holding 1465 pounds in a 4 square foot area where the fountain will be assembled.
 - a. **Be sure to check that each part is level and centered during the assembly of this fountain.**
2. Place the urn (P-711) over the base.
3. Assemble the pump kit
 - a. Fit the 3/4" clear tubing over the pump outlet.
 - b. Place the stopper around the pump cord approximately 8" from the pump.
4. Feed the pump cord all the way through the hole in the urn (P-711), through the base (FT-269H), and out of the opening in the bottom of the base.
5. **FIRMLY** press the stopper into the hole evenly.
 - a. Note: Using the handle of a screwdriver or hammer works best to press the stopper in place.
6. Place the large pedestal (FT-269F) over the pump.
7. Feed the tubing that is connected to the pump through the hole in the center of the large pedestal (FT-269F).
8. Position the medium bowl (FT-269E) over the large pedestal (FT-269F).
9. Using a hose clamp, secure the tubing that was fed through the large pedestal (FT-269F) to the pipe protruding from the bottom of the medium bowl (FT-269E).
10. Secure the 18" length of tubing to the pipe protruding from inside the medium bowl (FT-269E) with a hose clamp.
11. Place the small pedestal (FT-269C) in the center of the medium bowl (FT-269E).
12. Feed the 18" length of tubing connected to the inside of the medium bowl (FT-269E) through the hole in the center of the small pedestal (FT-269C).



FT-269B (40 lbs)
20.25"W x 7"H



FT-269A (22 lbs)
5.5"W x 12.5"H



FT-269D (3 lbs)
5"L x 1.5"W x 5"H



FT-269G (5 lbs)
6.25"L x 1.5"W x 5.25"H



FT-269I (15 lbs)
7.75"L x 1.5"W x 7"H

13. Position the small bowl (FT-269B) over the small pedestal (FT-269C).
14. Using a hose clamp, secure the tubing that was fed through the small pedestal (FT-269C) to the pipe protruding from the bottom of the small bowl (FT-269B).
15. Place the finial (FT-269A) into the small bowl (FT-269B) by fitting the copper in the finial over the copper in the bowl.
16. Fit the small pump cover door (FT-269D) into the small pedestal (FT-269C).
17. Fit the medium pump cover door (FT-269G) into the medium pedestal (FT-269F).
18. Fit the base door (FT-269I) into the base (FT-269H).
19. Fill the basin with water.