

FT-41 Bisbalos Fountain

Three people are recommended for the installation of this fountain!



FOUNTAIN INFORMATION:

This fountain holds approximately 20 gallons of water.

**This fountain uses a medium fountain cover.
(FTNCOV-MED)**

**Compatible with #7 Refill Device
(A special stopper is required to use the refill kit for
this fountain.)**


Pump Kit Parts List

PK300 pump (1)
#7 stopper (1)
Approx. 25" length of 1/2" Black Non-kink tubing (1)
Approx. 12" length of 1/2" Black Non-kink tubing (1)
3/8" I.D. 1/2" O.D. copper sleeve (1)
Approx. 1 1/2" length of 3/8"i.d. 1/2"o.d. copper pipe (1)
Wedges (2)
Hose clamps (5)

* Hose clamps may be used as flow restrictors

TOOLS REQUIRED:

Bubble Level

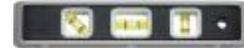

PUMP INFORMATION:

**320 GPH Pump (PF320)
16 FT cord length**

- W I N T E R C A R E -

Fountain bowls/tops and other fountain components, which collect water, should not be left outside in the winter since any component, which fills with water and freezes may crack. Likewise, components such as pedestals, which remain in a basin, filled with water, which then freezes, may also crack or crumble. Ideally, therefore, a fountain should always be stored indoors or in a dry protected place such as a covered porch away from the elements. However, if a fountain must be left outside:

- (1) Remove pump, rubber stoppers, drainpipes, finials, and other small components for storage indoors. Note that stoppers or drainpipes are removed to allow drainage in the event water accumulates in any basin.
- (2) Raise fountain base from ground with wood strips so that base will not freeze to the ground surface.
- (3) Cover or wrap the fountain with burlap or other absorbent material (old blanket or towel) and then cover securely with plastic, making sure that water will not accumulate in the basin or other fountain component and freeze;
- (4) Check fountain periodically to insure that plastic is secure and water is not accumulating in any fountain component.

- G E N E R A L F O U N T A I N T I P S -

Install fountains on a level surface. You will need a properly grounded 110-volt (AC only) GFCI protected receptacle near the fountain for your pump. All pumps are submersible and must be completely underwater to function properly. Test all pumps and adjust to full output prior to assembly. It is not recommended that fountains be placed directly on grass or dirt. Position the channel opening at the base of each fountain toward the electrical outlet to be used since the pump cord will be threaded through this opening.

All of our cast stone is proudly




Made in USA

Check out YouTube for a "How to" video.
For more Campania product information visit www.campaniainternational.com


FT-41 Bisbalos Fountain

Three people are recommended for the installation of this fountain!

Assemble your fountain on a level surface capable of holding a minimum of 528 pounds with an approximate 8 square foot footprint.

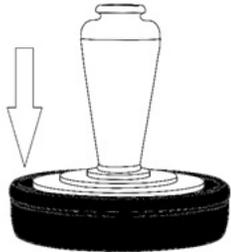

FT-38C (191 lbs)
34"W x 8.5"H

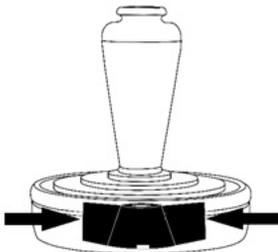

FT-41D (26 lbs)
25"W x 5"H



FT-41C (66 lbs)
27"W x 2.5"H



FT-41B (49 lbs)
12"W x 21"H



FT-41A (26 lbs)
12.5"W x 5"H

1. Place the basin (FT-38C) into position where the fountain will be installed, ensuring that it is level.
2. Assemble the pump kit
 - a. Using a hose clamp, attach the 12" piece of 1/2" non-kink tubing to the pump outlet.
 - b. Place a hose clamp over the other end of the 12" length of 1/2" non-kink tubing.
 - c. Place the stopper around the pump cord approximately 8" from the pump.
3. Feed the pump cord through the hole and the channel in the basin (FT-38C).
4. **FIRMLY** press the stopper into the hole evenly.
 - a. Note: Using the handle of a screwdriver or hammer works best to press the stopper in place.
5. Place the pump cover (FT-41D) over the pump and in the center of the basin (FT-38C).
6. Center and level the disc (FT-41C) over the pump cover (FT-41D).
7. Feed the 1/2" non-kink tubing connected to the pump through the center of the disc (FT-41C).
8. Connect the loose end of the 1/2" non-kink tubing connected to the pump to the copper pipe protruding from the bottom of the urn (FT-41B).
9. Center and level the urn (FT-41B) on the disc (FT-41C).
10. **Inside** the urn (FT-41B), secure the 25" length of 1/2" non-kink tubing to the copper pipe protruding from the bottom.
11. Connect the loose end of the 25" length of 1/2" non-kink tubing to the top ring (FT-41A).
12. Fit the top ring (FT-41A) into the urn (FT-41B).
13. Place the copper sleeve over the pipe in the top of the top ring (FT-41A).
14. Insert the 1 1/2" copper pipe into the sleeve.
15. Fill the fountain with water.